


INSTALLATION INSTRUCTIONS


Mixer Valve

冷熱調節閥安裝說明

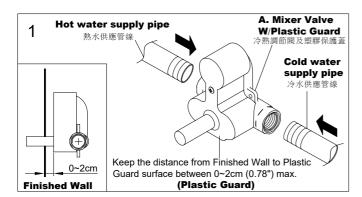

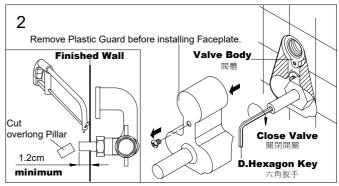

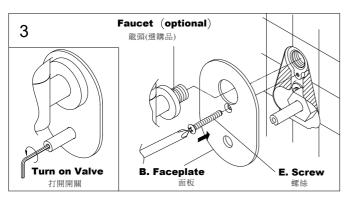

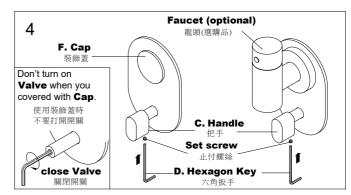

CAUTION: Prevent The Risk Of Product Damage.

注意:為增加產品使用壽命,請依說明清潔供水管路。

When finish installation, turn on the valve and run for 1 minute before using.

完成安裝後,需在使用前先把供水開關全開排水持續一分鐘。

WARNING: Always turn off Valve with provided Hexagon Key (2.5mm) before starting. Keep the distance from Finished Wall to Plastic Guard surface between 0~2cm (0.78") max.

注意: 開始安裝前,務必用隨附的六角扳手(2.5mm)將冷熱供水開關關閉,(順時鐘方向旋轉,即可關閉開關)。牆壁與塑膠保護蓋表面保持在0~2cm(0.78")。

- 1. Apply pipe compound or sealant tape to Hot and Cold water supply pipe, and then connect to **Mixer Valve** as Fig. 1 show. 如Fig.1所示先將冷熱水供應管線的牙塗上管牙膠或包覆止洩帶,然後再與閥體組裝。
- 2. Remove **Plastic Guard** before installing **Faceplate**, cut overlong pillar, and close **Valve** with **Hexagon Key (2.5mm)** as Fig.2 show. 如Fig.2 所示安裝前先移除保護蓋並可依情況將過長的桿子切除,然後用六角扳手順時鐘方向關閉閥體。
- 3. Fix Faceplate with Screw, install Faucet (Optional), turn on the Valve with Hexagon Key, and fix Handle with Set screw. 用螺絲將面板固定住,然後在裝上水龍頭之後用六角扳手打開開關。
- 4. Or, Fix **Faceplate** with **Screw**, fix **Handle** with **Set screw**, and cover **Cap** to make it be ready for use. 或用螺絲將面板固定住,然後用止付螺絲將把手固定住,用用裝飾蓋將安裝龍頭的孔蓋住保持備用狀態。

Note: The Mixer Valve Handle is only for adjusting water temperature. Please keep the provided **Hexagon Key (2.5mm)** for turn on & close **Valve** for future necessary situation.

注意:冷熱調節閥的把手僅為調整水溫的功能。請保留隨附的六角扳手(2.5mm)以供往後打開或關閉閥體。

The threads of inlets of Valve are 1/2G. Please purchase the additional connectors for different specification of pipes (1/2BSPT). 閥體本身進水口的牙規格為1/2 G,如不符合使用規格請加購轉接頭1/2Gx1/2BSPT

FIXING CONTENTS

組配件內容

