 


Thank you for purchasing our product, please read the manual carefully before using.

感謝您購買本公司的商品。使用前請仔細閱讀使用說明書,保證正確安全的使用。閱讀之後請妥善保管,必要時取出閱讀。

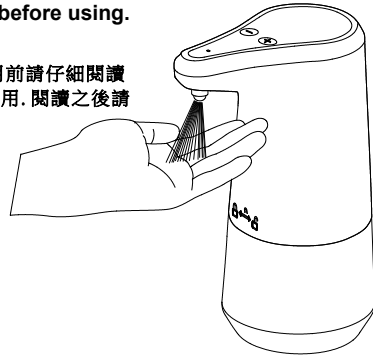

About Using Liquid

關於使用的液體

The device is for liquid Alcohol hand sanitizer dispenser with sensor. Do not use liquid cleansing oil, high viscosity liquid like gel hand sanitizer, shampoo, bubble hand soap, diluted hand sanitizer, or so on.

本機是酒精消毒液的感應機器。不要使用液體香皂,液體卸妝油或其他粘度的液體如乳狀洗手液,免洗洗手凝露,洗髮水,泡沫洗手液,稀釋性洗手液。

Product Detail

零件及名稱

Volume Control

 
開關/出液量調節

LED Indicator

指示燈

Spray Spout

出液口

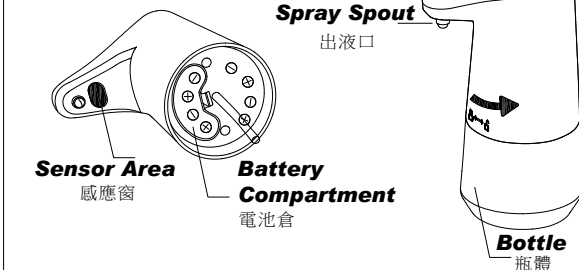

Turn the head of the machine as the direction of arrow as shown and there is a battery compartment at the bottom of device.

如箭頭方向轉開機頭,打開機器電池倉。

Product Specification

產品規格

Power : AA battery x 4pcs (not included) .

Battery life: About 10 months (count by ten senses/per day)

Battery performance depends on the using conditions , battery life might be shorter.

Capacity : About 350ml Product size: 86x128x192mm

Weight : 345g(exclude batteries) IPX level : IPX4

電 源: AA 電池 x 4顆 (本產品不含電池)

電池壽命: 約10個月 (1天出液10次) 請使用乾電池

電池性能: 根據使用條件, 電池的壽命可能會縮短。

液體容量: 約350ml 產品尺寸: 86x128x192mm

重 量: 345g(電池除外) 防水等級: IPX4

Attention:

When the battery power is low, the LED indicator will turn red, please replace all batteries together. Do not mix new, old or different types of AA batteries.

When clean the machine, please empty the liquid in the bottle, otherwise liquid will enter the machine and cause damage. Please wipe dirt with a clean soft cloth. It will be forbidden if wipe with high corrosive liquid or volatile liquid, which may easily cause deterioration, discoloration and damage for machine.

▲ 注意 ▲

請使用AA電池, 避免使用混裝的新舊電池或使用充電電池。電池電量不足時, 機器會亮紅燈, 請更換新電池。更換乾電池的時候請全部更換, 禁止新舊交替使用。清理機器時, 請將瓶子中的液體清空, 否則液體會進入機器裡, 造成機器損壞。髒汗處請用乾淨柔軟的布擦拭, 禁止使用腐蝕性強的液體或者汽油等揮發性液體等容易造成機器變形, 變色和破損。

INSTALLATION INSTRUCTIONS

Sensor Alcohol Disinfectant Spray Dispenser

全自動感應酒精噴霧機

Using Attention:

In the process of manufacturing and inspection, it is possible to leave moisture in the inner tube. The product is not completely waterproof. Avoid using in the water, spray with water, or place in high humidity area for a long time. As using, please do not tilt or reverse the device, the liquid inside may leak. Do not leave liquid inside the bottle if not in use for a long time. Please clean the nozzle regularly.

Safety Instructions:

Please read the notes carefully and use it safely and correctly.

Warning About the product:

- Please do not decomposition or modify the machine.
- The product is not completely waterproof.
- Do not use in high temperature, high humidity, dust and other places.
- Do not fill acid, alkali, oil and other liquids in the bottle.
- Keep away from high temperature things such as heating equipment.

Attention:

- Please do not place it in the place where it is shaken, hit hard, or on a rickety platform.
- Please do not be bumped or forced.
- Please do not place it near heating equipment, fire sources, oil, moisture or heated environment.
- Please do not let the liquid wet the internal components.

Warning About the batteries:

- When the battery leaks, please do not touch the liquid directly. If liquid is attached to the body or clothing, rinse with water immediately. If the skin has symptoms of inflammation or injury, consult a doctor immediately.
- When the battery fluid into the eyes, do not rub it. Rinse it with plenty of water and go to the hospital for treatment.
- Do not approach fire source, do not decompose or heating.
- Please do not charge the battery.
- Do not mix other types batteries them together.
- Please pay attention to the positive and negative side of the battery and install the battery correctly.
- Do not store batteries with metal necklaces, hairpin, etc.
- Please remove the battery from the machine If It is out of use for a long time.
- Do not mix new, old and different types of batteries.
- Do not use leaky batteries.
- Do not use batteries without protective film.

Attention:

- Please do not place It near a fire or in direct sunlight, or in a car under the scorching sun.
- Please do not let the battery drop, throw, or have a strong impact.
- Please do not peel off the protective film or damage the battery.
- Please read the precautions indicated on the battery carefully.
- To protect the environment, please dispose or recycle batteries in accordance with the regulations of the living area. It is everyone's responsibility to care for the environment.

FAQ

The device is not working properly :

- Check if the battery has enough power.
- Check if the batteries are installed in the right direction.
- Check the red sensor area to see if it has been shielded.

No liquid:

- Check if you fill in with liquid alcohol.

使用時的注意事項:

本品在製造、檢查的工序上有可能會在內部壁管留下水氣, 本產品不是完全防水的, 禁止在水中使用, 故意澆水或者長時間放置在濕度高的地方。在使用過程中, 請不要傾斜或顛倒機身, 裡面的液體可能會洩漏。如果長時間不使用的話, 請不要將液體放置在本產品中。請定期清洗噴嘴。

在使用前請仔細閱讀注意事項, 並正確的安全使用。

關於本機

- 請不要分解或改造機器。
- 本產品不是完全防水。
- 不要在高溫、高濕、灰塵多的地方使用, 瓶內禁止灌裝酸、鹼、油等液體。
- 請勿靠近取暖設備等溫度高的東西。

注意:

- 請不要放置在震動、衝擊大的地方或者搖晃的櫃子等傾斜的地方。
- 請不要被碰撞或用力按壓。
- 請不要放置在暖氣設備和火源附近, 或者是油、蒸汽、受熱的地方。
- 請不要讓內部零部件接觸到液體。

關於電池 ▲ 警告 ▲

- 電池漏液的時候, 請不要直接接觸液體。如果液體附著在身體或衣服上, 要立即用清水沖洗, 如果皮膚有炎症或受傷症狀, 請立刻就醫。
- 當電池裡的液進入眼睛時, 不要揉, 要用大量清水沖洗乾淨, 立即去醫院進行治療。
- 禁止靠近火源, 禁止分解、加熱。
- 乾電池請不要充電。
- 請不要使用指定種類以外的電池。
- 請注意電池的正負極, 正確地裝入電池
- 不要把電池和金屬項鍊、髮卡等一起搬運或保管。
- 電池用完了或者長時間不使用的情況下, 請從機器中取出來。
- 請不要混合使用新、舊及不同種類的乾電池。
- 請不要使用漏液的電池。
- 不要使用外殼剝落的電池。

▲ 注意 ▲

- 請不要放置在靠近火的地方或陽光直射的地方, 或在烈日下的車中等高溫環境下。
- 請不要讓電池下墜或投擲, 或產生強烈的衝擊。
- 請不要剝下電池的外裝膠捲或弄傷電池。
- 請結合電池上所表示的注意事項閱讀。
- 使用完的乾電池為了保護環境, 請拿著按照居住區域的規定方法處理或者回收 乾電池。愛護環境, 人人有責。

常見問題

不正常運轉:

 
- 檢查電池是否有足夠的電量。
- 電池的方向是否正確。
- 紅色感應區域是否被異物遮擋。

無法出液:

- 是否使用了其他粘性液體。

Using method

使用步驟

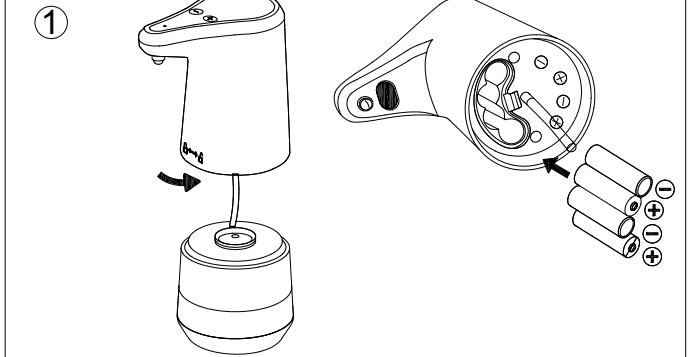


Turn counterclockwise and remove the bottle.

Open the battery compartment and install 4pcs AA batteries as shown.

逆時針輕旋,取下瓶體。打開電池蓋,按圖示的正負極正確方向裝入4顆AA電池。

Using method

 使用步驟

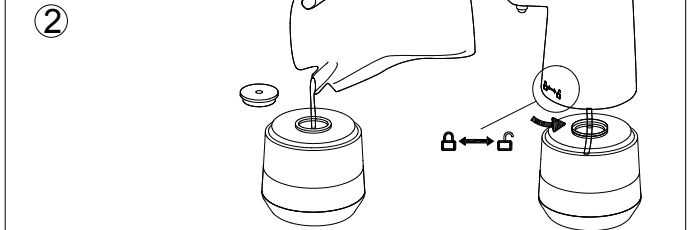


Unlock the bottle and remove the silicone cap if the silicone cap is on silicone tube of the main body.

If the silicone cap is on the liquid bottle, remove it first, and then pour in the liquid. Be careful not to mix different liquids. Seal the bottle with silicone cap, and then reassemble the machine back till hear "click" sound.

打開瓶身, 取下瓶身的時候如果矽膠帽在主體一側(在矽膠管上), 請取下來。如果矽膠帽在液體瓶上, 請先取下, 然後再倒入液體。注意不同的液體請不要混合使用。先將矽膠帽蓋在液體瓶上, 然後將機身裝上。安裝機身的時候, 聽到“卡嗒”聲表示安裝好。

Using method

 使用步驟

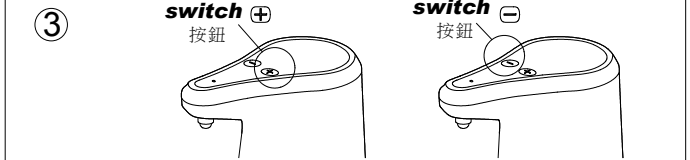

There are two levels liquid volume, adjust it through the +, - button. Enter low liquid volume default mode when starting for the first time.

If the device Shutdown, press the + button for 1 second to turn on the device and the indicator light will be green. Long press the - button for 3 seconds to turn off the device, and the indicator light will be red. When the battery is low, the indicator will turn red to remind you to replace the battery. Normally do not need to shut down the device, it will automatically standby when not working.

有高低兩個出液量, 通過按鈕 + - 切換。安裝電池後預設開機&低液量模式。關機狀態下, 輕按頂部按鈕 + 1秒開啟設備, 指示燈顯示綠色。長按頂部按鈕 - 3秒關閉設備, 指示燈顯示紅色。低電量時, 指示燈會變紅, 提醒需要更換電池。正常情況無需關機, 不工作時將自動待機。