


INSTALLATION INSTRUCTIONS

Kitchen Faucet W/Sprayer 廚房龍頭 (附噴槍) 安裝說明

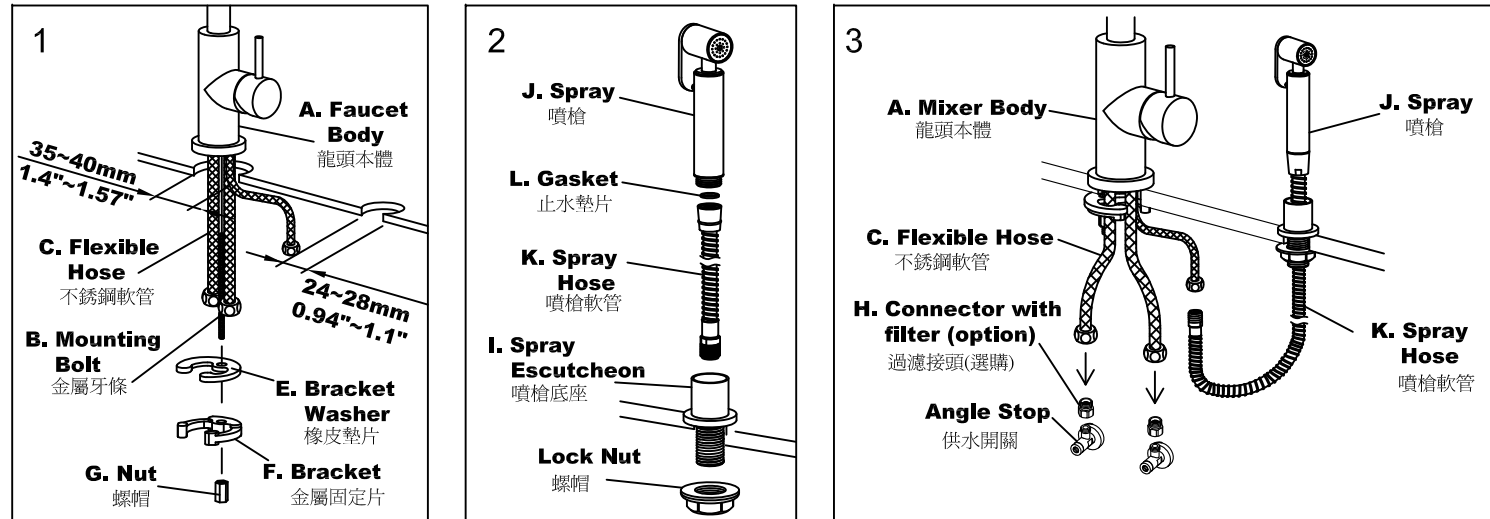

1. Screw **Flexible Hoses** and **Mounting Bolt** into the end of **Faucet Body**, then insert **Flexible Hoses** and **mounting bolt** through hole in fixture. Position **Faucet Body** on fixture and place **Bracket** with **Bracket Washer** and **Nut** onto **Mounting Bolt**, then tighten **Nut** securely.
先將冷熱進水不銹鋼軟管和金屬牙條鎖緊固定於龍頭本體上，然後將冷熱進水不銹鋼軟管和金屬牙條穿過洗臉盆（檯）洞口後，從金屬牙條下方依序套入橡皮墊片、金屬固定片和螺帽，確認方向位置後，鎖緊螺帽固定龍頭即可。
2. Remove the **Lock Nut** from the **Spray Escutcheon** first, then insert the **Spray Escutcheon** into the deck hole and tighten the **Lock Nut** to secure the **Spray Escutcheon** in place.
將噴槍底座上的螺帽鬆開，然後將噴槍底座穿過檯面洞口，鎖緊螺帽固定噴槍底座。
3. Assemble the **Spray** with **Spray Hose**, then insert the **Spray Hose** through the **Spray Escutcheon** and connect the **Spray Hose** to **Faucet Hose-outlet**, tighten it. Connect Hot & Cold **Flexible Hoses** to angle stops.
組合噴槍軟管與噴槍，並連結鎖緊噴槍軟管與龍頭小軟管接頭。最後連接冷熱進水不銹鋼軟管到供水開關，確認完成安裝程序。

MAINTAINING


維護方式

1. To clean the plastic meshes cover, please using 4mm **Hex Key** to remove the plastic meshes cover only as attached figure shown.
清潔噴灑頭塑膠蓋，如圖指示，使用 4mm 六角扳手開啓或裝置噴灑頭塑膠蓋。

CAUTION

注意事項

1. Do not remove inner metal seal. Reassembly the inner metal seal parts may cause the sprayer to lose function or damage the sprayer.
請勿取出內部金屬止水零件。重新組裝內部金屬止水零件，可能導致噴槍功能失效或嚴重損壞噴槍。
2. Do not overtighten the plastic meshes cover when reassembly, or may damage the hex hole of plastic meshes cover.
重新裝置噴灑頭塑膠蓋時，請勿過度鎖緊，損壞塑膠六角內孔。

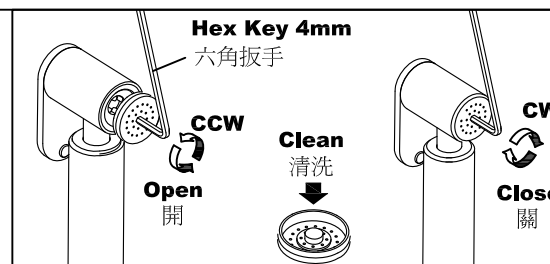


Diverting device replacement guide 水流切換設備更換說明



1. Loosen Screw from the **Faucet Body** as shown in figure 4.
如圖4所示將螺絲從龍頭本體拆下。
2. Open valve **slowly**, run water through the **Faucet body** opening, and it will flush out the diverting device and the spacer.
慢慢打開開關，然後水會將切換設備及墊圈沖出。（注意：拿一塊抹布或是布蓋住龍頭本體的頂端以避免切換設備被水沖飛掉）
3. After cleaning or replacing the device, locate the device, the spacer and the spout into the **Faucet Body** in order as shown in figure 6. And then tighten the screw.
清理完切換設備或更換新零件後，如圖C所示將切換設備，墊片及出水口依序裝回龍頭本體。（注意：確定切換設備有裝到龍頭本體內部的底端）

Check Valve replacement guide 逆止閥設備更換說明

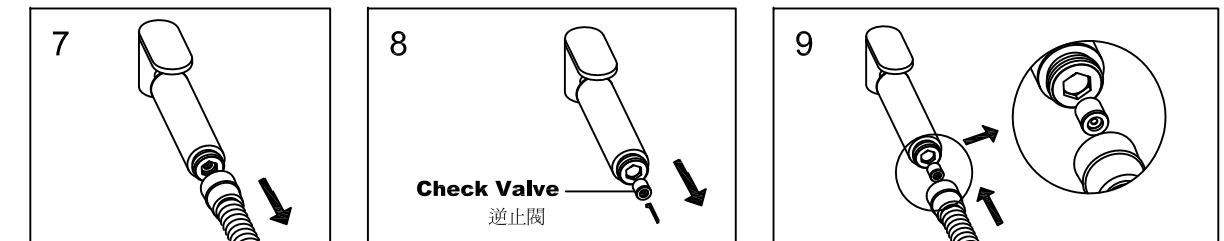

1. Disassemble the flexible hose from the side spray as shown in figure 7.
如圖7所示，將蛇管從噴槍拆下。
2. take out **Check Valve** from the bottom of side spray as shown in figure 8.
如圖8所示，將逆止閥從噴槍拆下。
3. After cleaning or replacing the device, locate the device into the side spray, in order as shown in figure 9. And then tighten
將逆止閥裝回噴槍並且將蛇管鎖緊，如圖9所示。

CAUTION : Risk Of Product Damage.

注意：為增加產品使用壽命，請依說明清潔供水管路。

- a. Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body.
安裝編織管之前，先把供水開關全開排水一分鐘。或 b/
- b. Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.
把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

FIXING CONTENTS

組配件內容

