INSTALLATION INSTRUCTIONS


6840安裝說明

1. Using a 6mm drill-bit, drill the holes in the proper positions to a depth of 40mm, then insert the Plastic Anchors flush with the wall, and install the Basket in place.


在預定安裝置物籃的位置,使用6 mm鑽頭鑽孔,鑽孔深度4公分, 崁入塑膠 塞並使之齊平於牆面,然後以螺絲鎖緊置物籃於牆面上.

2. Secure the **Decorative Covers** to finish.

將裝飾蓋套上置物籃即完成安裝程序.

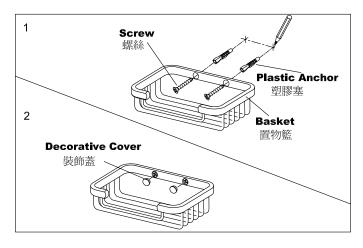

6840 SERIES:

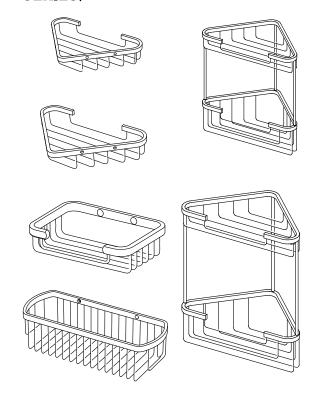

JUSTIME | 巧時代 | ST SHENG TAI BRASSWARE CO., LTD.

www.justime.com

PU68-40-ST00 = 000 091012 MADE IN TAIWAN

INSTALLATION INSTRUCTIONS


6840安裝說明

1. Using a 6mm drill-bit, drill the holes in the proper positions to a depth of 40mm, then insert the Plastic Anchors flush with the wall, and install the Basket in place.

在預定安裝置物籃的位置,使用6mm鑽頭鑽孔,鑽孔深度4公分,崁入塑膠 塞並使之齊平於牆面,然後以螺絲鎖緊置物籃於牆面上.

2. Secure the **Decorative Covers** to finish.

將裝飾蓋套上置物籃即完成安裝程序.

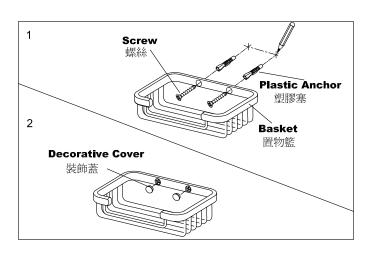

6840 SERIES:

