


INSTALLATION INSTRUCTIONS

Door Handles

雙把門把安裝說明

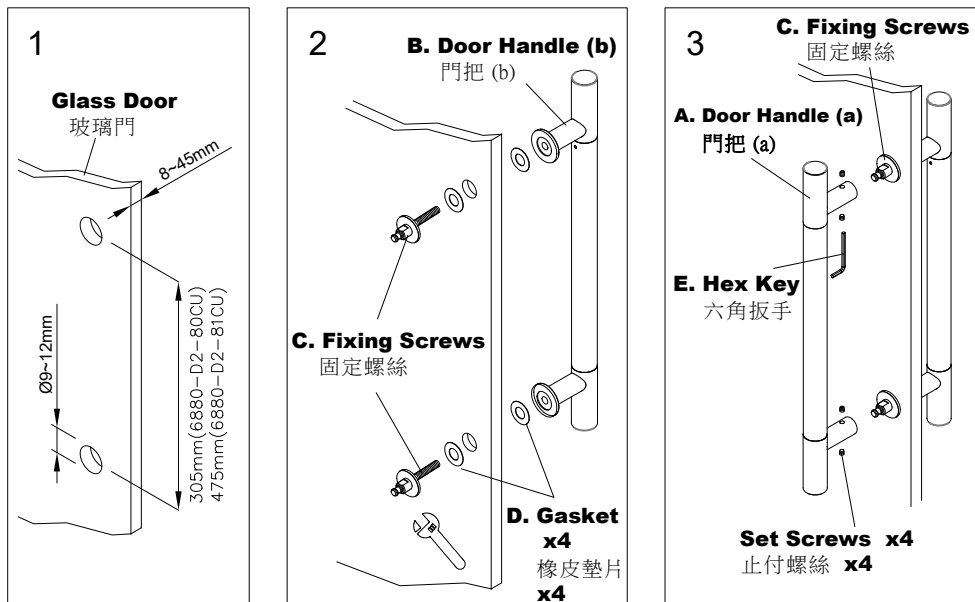

NOTE: Necessary sizes for installation are as fig.1 show.

注意：請於安裝前先確認玻璃厚度為8~45mm，玻璃鑽孔的位置與大小如圖1所示。

1. Place the **Gaskets** between **Fixing Screws** and **Door Handle (b)** as fig. 2 show, and then secure **Fixing Screws** with 12 mm wrench.
先如圖2所示，將橡皮墊片置入安裝門把(b)及固定螺絲，再使用12mm開口扳手將固定螺絲鎖緊。
2. Use provided **Hex Key** to loosen the **set screws** on **Door Handle (a)** for installation.
安裝之前，使用隨附的六角扳手將止付螺絲從門把(a)鬆開。
3. Slide **Door Handle (a)** onto **Fixing Screws** as fig.3 show, and then tighten all **set screws** securely.
如圖3，將門把(a)裝入固定螺絲，並將所有的止付螺絲鎖緊。

FIXING CONTENTS

組配件內容

