
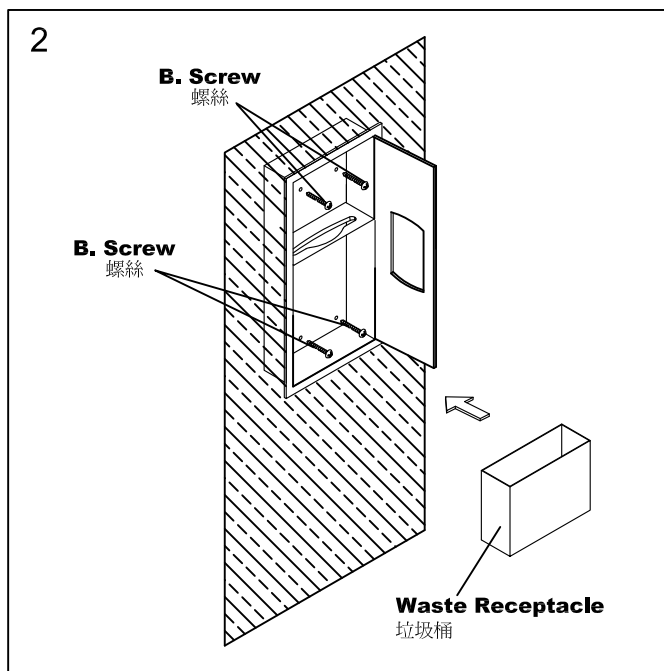


# INSTALLATION INSTRUCTIONS

## RECESSED PAPER TOWEL DISPENSER AND WASTE RECEPTACLE

嵌牆式擦手紙箱附垃圾桶

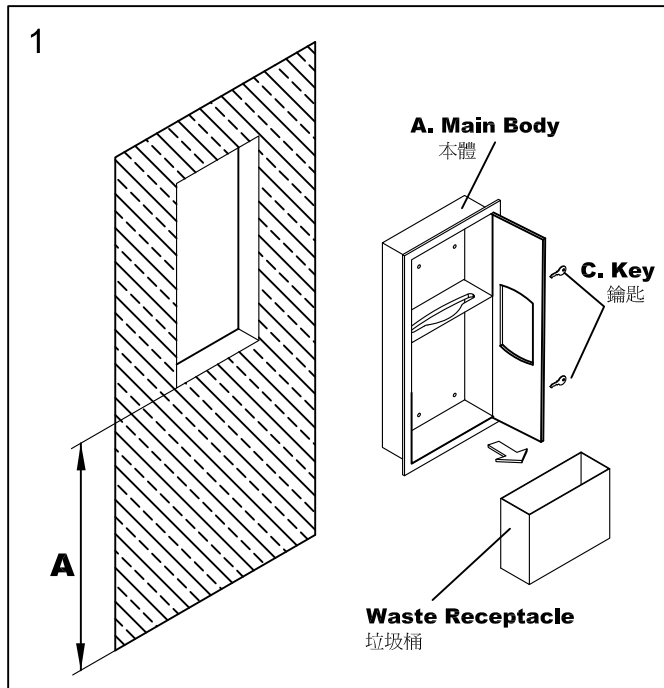

1. Installation Space Requirement :  
W305mm(12") x H660mm(26-1/2") x D92mm(3-5/8")  
Installing Height (**A**):  
(a).General Space: (32-3/8") from floor to the edge down the **Main Body**.  
(b).Barrier-free Environment: 669mm (26-3/8") from floor to the edge down the **Main Body**.  
(c).Basin Table: 102mm(4") from table to the edge down the **Main Body**.

開牆尺寸:


W305mm(12") x H660mm(26-1/2") x D92mm(3-5/8")

建議安裝高度A:

- (a). 一般使用,自地板到箱體下緣 822mm (32-3/8")
- (b). 無障礙空間,自地板到箱體下緣 669mm (26-3/8")
- (c). 大理石檯面,自檯面到箱體下緣 102mm(4")

2. Take out the **Waste Receptacle** and open the door of paper towel box with provided **Key**.  
取出嵌牆式擦手紙箱附的垃圾桶,及用鑰匙開啓紙箱門板。
3. Insert the **Main Body** into the prepared installing space of wall, and fix to the wall with **Screws** from inside of **Main Body**.  
將嵌牆式擦手紙箱裝入已開好的牆面,內部用螺絲與牆面固定。

4. After finish the installation, restore the **Waste Receptacle** in the **Main Body**.  
固定好嵌牆式擦手紙箱裝,再將垃圾桶置入。

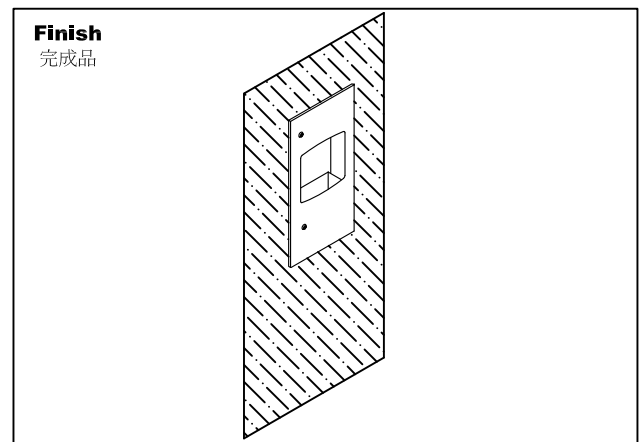

## FIXING CONTENTS

組配件內容

